

Adjusting



Function	Command
Open the main menu.	›Main menu‹
"Options", open the menu.	›Options‹
"Settings", open the menu.	›Settings‹
Switch off the Control Display.	›Control display off‹
Open the settings for the Control Display.	›Control display‹
Select split screen content.	›Split screen ...‹, e.g., map split screen
Open settings for info display of the instrument cluster.	›Instrument cluster‹
Open settings for time and date.	›Time and date‹
Open settings for language and units.	›Language and units‹
Open setting for speed limit.	›Speed‹
Open settings for light.	›Lighting‹
Open settings for door locking.	›Doors and key‹
Open settings for climate control.	›Climate‹
Open settings for Personal Profile.	›Profiles‹
Open settings for driving mode.	›Driving mode‹
Open settings for Sport mode.	›Sport mode‹
Open settings for ECO PRO mode.	›ECO PRO mode‹
Open settings for Intelligent Safety.	›Intelligent Safety‹
Open settings for front-end collision warning.	›Frontal Collision Warning‹
Open settings for eDrive.	›Auto eDRIVE‹
Open settings for charging.	›Charging‹
Open settings for Range Extender.	›Range extender‹
Open settings for DTC.	›Traction control‹
Open settings for Touchpad.	›Touchpad‹
Open settings for data connections.	›Connections‹

Vehicle



Owner's Manual

Function	Command
Open user instructions for the selected menu.	›Display Owner's Manual‹
Open the Quick Reference Guide.	›Quick reference‹
Open the index.	›Owner's Manual‹
Open the search by pictures.	›Search by pictures‹

Computer

Function	Command
Call up the computer.	›Onboard info‹
Call up the trip computer.	›Trip computer‹

Vehicle

Function	Command
"Vehicle info", Open the menu.	›Vehicle info‹
Display vehicle status.	›Vehicle status‹
Open sport displays.	›Sport displays‹
Displaying EfficientDynamics info.	›Efficient Dynamics‹
Display info.	›eDRIVE‹

Navigation



General information

Function	Command
"Navigation", Open the menu.	›Navigation‹
Navigate to contact from the address book in Navigation or to an address.	›Navigate to ...‹
Open the destination entry.	›Enter address‹
Enter a state/province.	›State‹
Enter the town/city.	›City‹
Enter the street.	›Street‹
Enter the postal code.	›Postal Code‹
Open special destinations.	›Points of Interest‹
Open "Free text search".	›Free text search‹
Open "Online search".	›Online search‹
Open "Last charging stations".	›Last charging stations‹
Destination guidance, open the menu.	›Guidance‹
Start destination guidance.	›Start guidance‹
Terminate destination guidance.	›Stop guidance‹
Open the home address.	›Home address‹
Open the route criteria.	›Routes‹
Open the route.	›Route information‹
Open the route simulation.	›Route simulation‹
Turn on spoken instructions.	›Voice instructions on‹
Repeat the spoken instruction.	›Repeat voice instructions‹
Turn off spoken instructions.	›Voice instructions off‹
Open the address book.	›Address book‹
Display the most recent destinations.	›Last destinations‹
Open the traffic bulletins.	›Traffic Info‹

Map

Function	Command
Display the map.	›Map‹
Map facing north.	›Map facing north‹
Map facing the direction of travel.	›Map in direction of travel‹
Perspective map.	›Map perspective‹
Open the map scale.	›Map scale‹, e.g. map scale 100 meters
Automatic map scale scaling.	›Map with automatic scaling‹
Switch off automatic map scale scaling.	›Map without automatic scaling‹
Automatic day/night map mode.	›Map mode automatic‹
Switch on the night map mode.	›Map mode night‹
Switch on the day map mode.	›Map mode day‹

Split screen settings

Function	Command
Switch on the split screen.	›Split screen on‹
Switch off the split screen.	›Split screen off‹
Open the selection for display in split screen.	›Split screen content‹

Destination guidance with intermediate destinations

Function	Command
Enter a new destination.	›Enter address‹
Open trip list.	›Stored trips‹

Multimedia



General information

Function	Command
"Multimedia", Open the menu.	›Multimedia‹

Music collection

Function	Command
Open the music collection menu.	›Music collection‹
Switch to the music collection with sound output on.	›Music collection on‹
Open music search.	›Music search‹
Open the playback lists.	›Playlists‹

External devices

Function	Command
"External devices", Open the menu.	›External devices‹
Start playback through Bluetooth device.	›Bluetooth player on‹
Open the Bluetooth device.	›Bluetooth player‹
Open AUX at front.	›AUX‹
USB Audio, open the menu.	›U S B‹
Switch to the USB audio device with sound output switched on.	›U S B on‹
External device in the snap-in adapter, open the menu.	›Snap-in device‹
Activate Apple iPod/iPhone.	›iPod‹
Switch to external device in the snap-in adapter with the sound output switched on.	›Snap-in device on‹
"Software update", Open the menu.	›Software update‹
"Plugin", Open the menu.	›Plugin‹

Radio



General information

Function	Command
"Radio", Open the menu.	›Radio‹
Switch to the radio with sound output switched on.	›Radio on‹
Open the station list.	›Select station‹

FM

Function	Command
"FM", Open the menu.	›F M‹
Open a frequency.	›FM ... F M‹, e.g. the frequency 93.5 megahertz
Switch to the FM waveband.	›F M on‹
Open manual station selection in the FM waveband.	›F M manual‹

Satellite radio

Function	Command
"Satellite radio", Open the menu.	›Satellite radio‹
Switch to satellite radio with sound output switched on.	›Satellite radio on‹
Select the channel.	›Channel ...‹

Stored stations

Function	Command
"Presets", Open the menu.	›Presets‹
Open the list of stored stations.	›Select preset‹
Select a stored station.	›Preset ...‹ e.g., stored station 2