


Removing and installing/replacing left luggage compartment wheel arch trim

Necessary preliminary tasks:

1. Removing and installing/replacing luggage compartment well

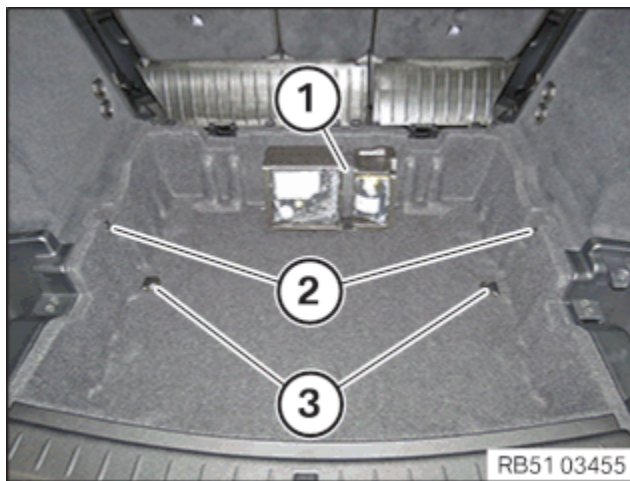


Release and remove Mobility Set (1).

Unfasten screws (2).

Lever out lashing eye covers (3) and loosen screws underneath.

Remove the lashing eyes.

Lift up luggage compartment well at front and feed out to rear.

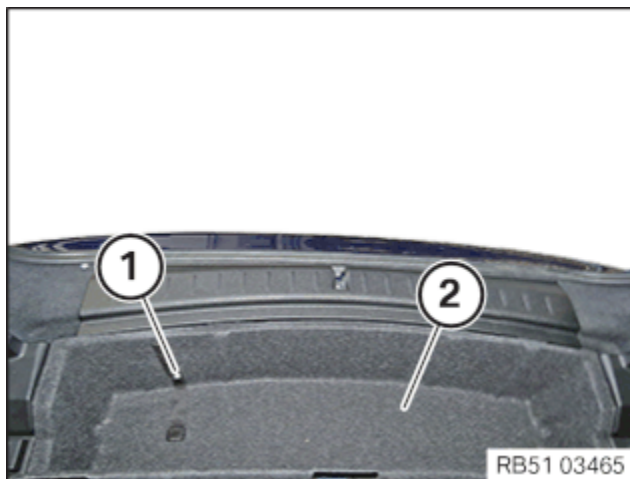


Equipment specification with 3rd seat row:

Remove toolkit.

Release screw (1).

Lift luggage compartment well (2) and remove

1A - Installation:

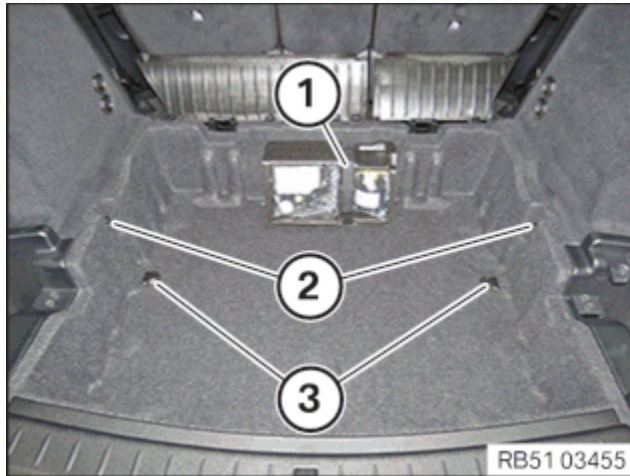

Feed in luggage compartment well.


Insert Mobility Set (1) and secure.

Tighten down screws (2).

Install lashing eyes (3) and tighten screws.

Tightening torque [51 47 1AZ](#).

Install lashing eye covers (2).

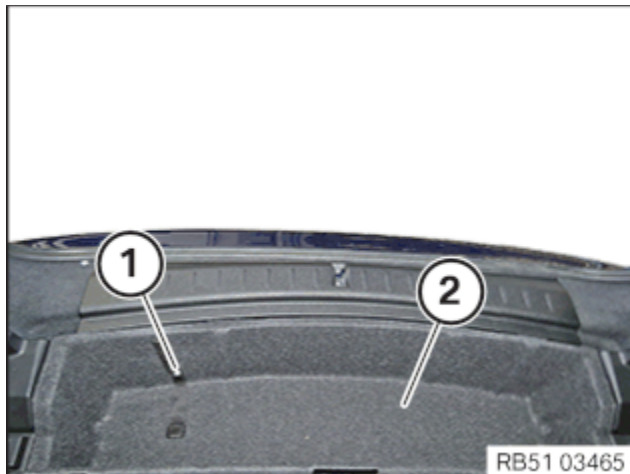

Equipment specification with 3rd seat row:


Install luggage compartment well (2).

Tighten screw (1).


Install toolkit.

2. Removing and installing/replacing luggage compartment floor trim panel

Removal:

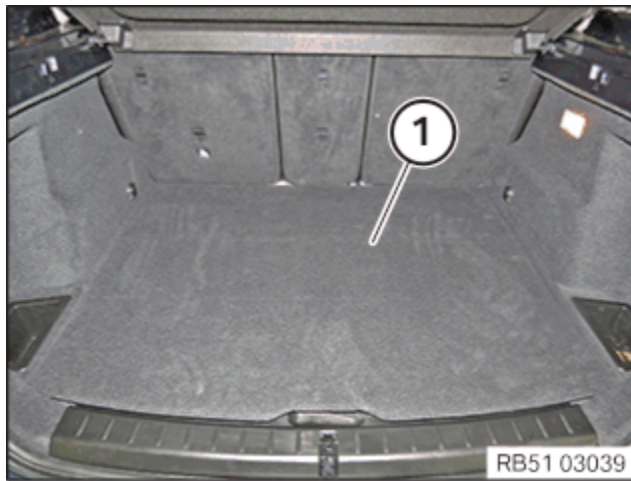

Lift luggage compartment floor trim panel (1) at rear and remove.

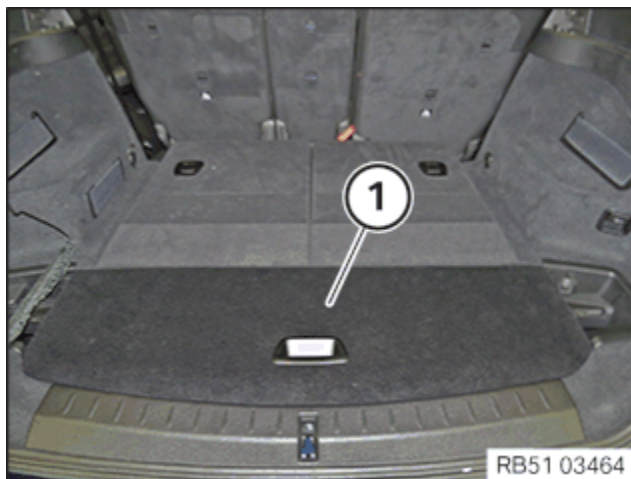

Equipment specification with 3rd seat row:

Lift luggage compartment floor trim panel (1) at rear and remove.

2A - Installation:


For replacement with equipment specification
3rd row of seats:

Note:


Depending on the version, holders (1) may be installed.

When replacing the luggage compartment floor trim panel, holders (1) must be removed.


Holders (1) are no longer required.

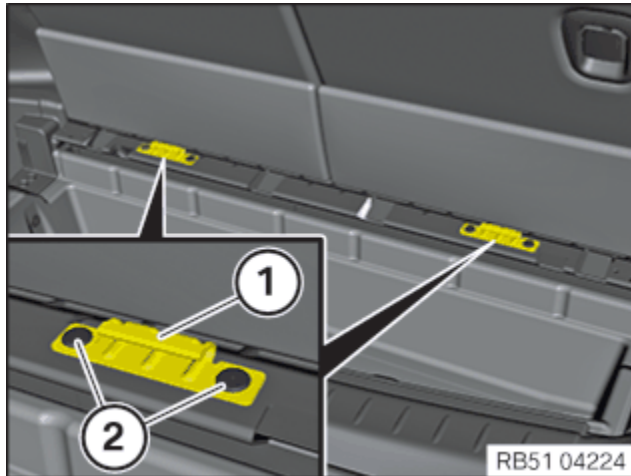

Drill out rivets (2) and remove holder (1).

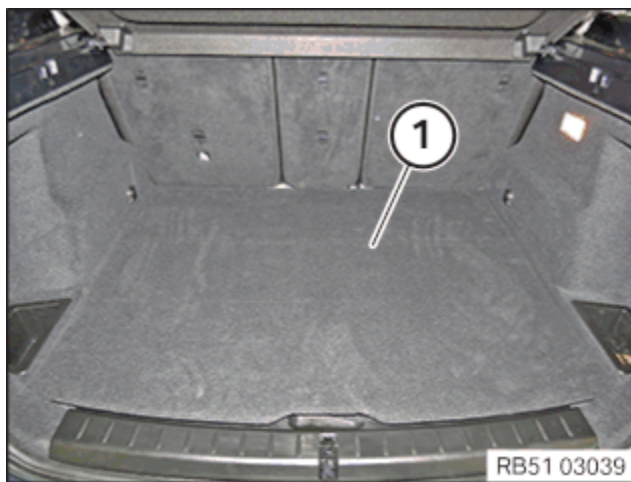

Attach luggage compartment floor trim panel (1) at front in hooks and lay down at rear.

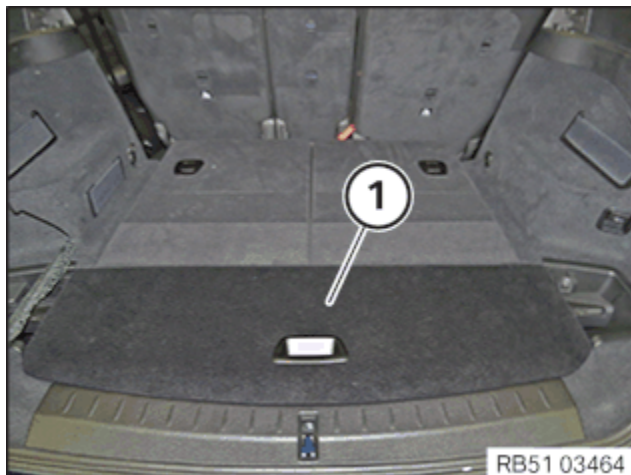


Equipment specification with 3rd seat row:

Attach luggage compartment floor trim panel (1) at front in hooks and lay down at rear.

3. Removing Tail Panel Cover


3A - Removal:

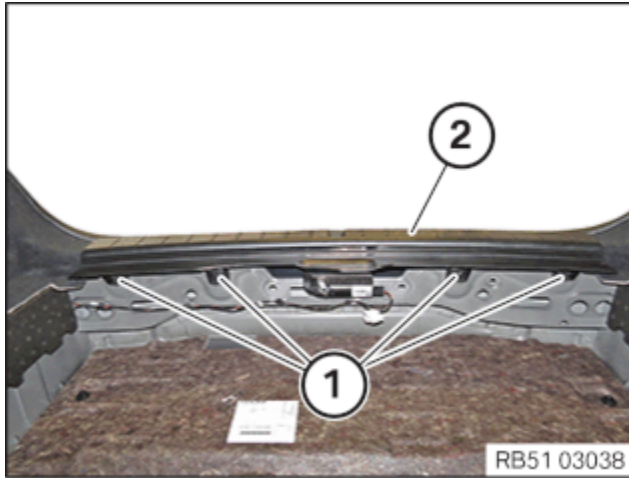

Release expanding rivets (1) from tail panel trim (2).

Lift off trim on tail panel (2).

3B - Installation:

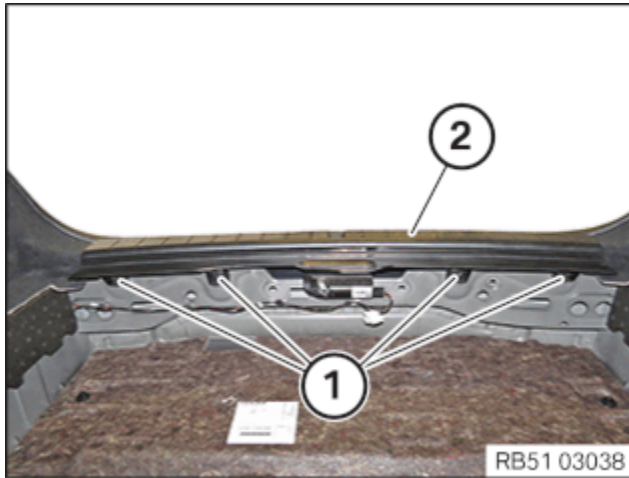

Install trim on tail panel (2).

Mount expanding rivets (1) on tail panel trim (2).

Removing and installing/replacing left luggage compartment wheel arch trim




Necessary preliminary tasks:

- Remove [cover from tail panel](#)



Removal:

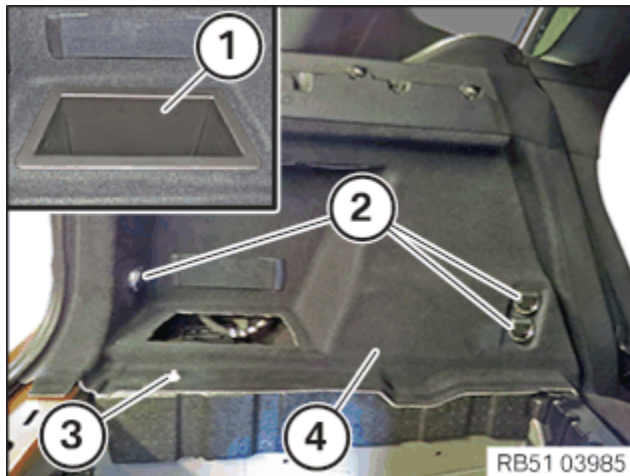

Lift out storage compartment (1) upwards.


Lever out lashing eye covers (2) and loosen screws underneath.

Remove the lashing eyes.

Remove the pin (3) and remove the trim panel (4) towards the inside.



Installation:

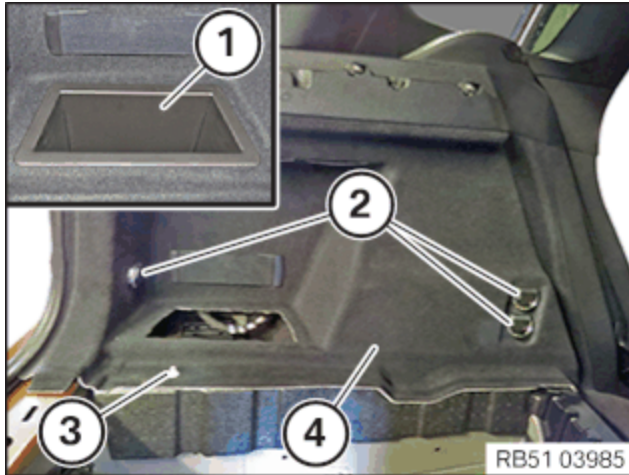

Insert the trim panel (4) and tighten the pin (3).

Tightening torque [51 47 6AZ](#).


Install lashing eyes and tighten screws.

Tightening torque [51 47 1AZ](#).


Install lashing eye covers (2).

Install storage compartment (1).

Removing and installing or replacing amplifier:

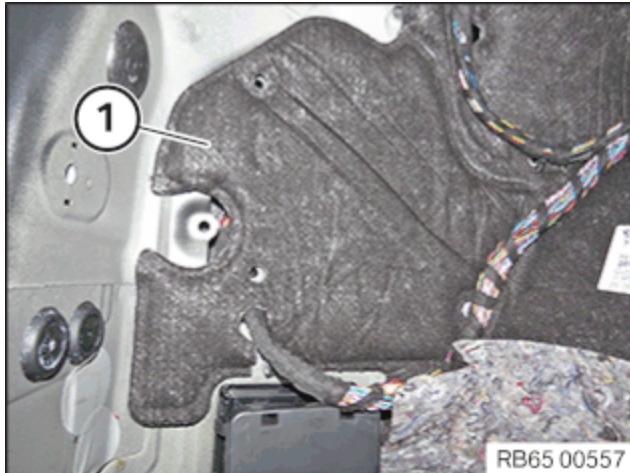


Fold up insulating mat (1).

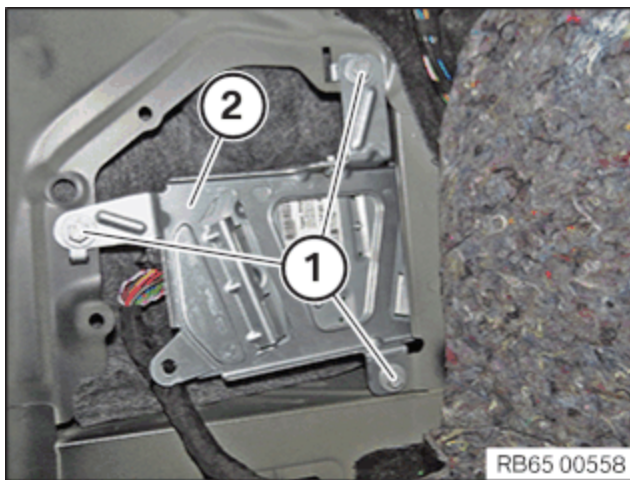

Release screws (1).

Remove amplifier with holder (2).

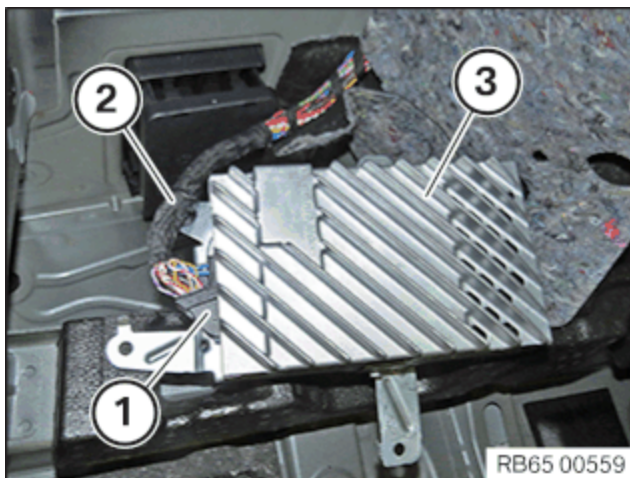


Unlock and disconnect the connector (1).

Unclip cable tie (2).

Remove amplifier with holder (3).




Replacement:

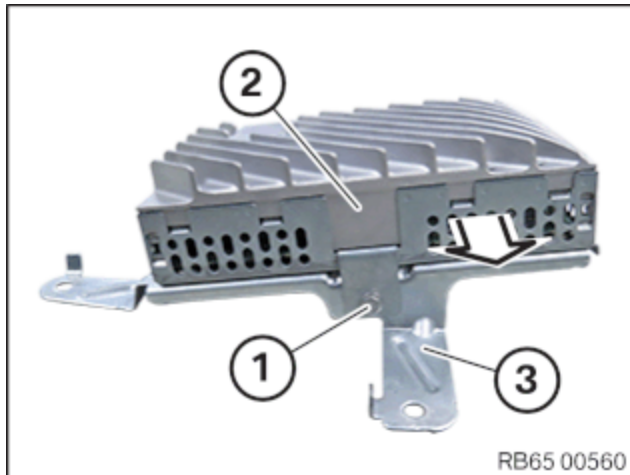

Release screw (1).

Remove amplifier (2) from holder (3) in direction of arrow.

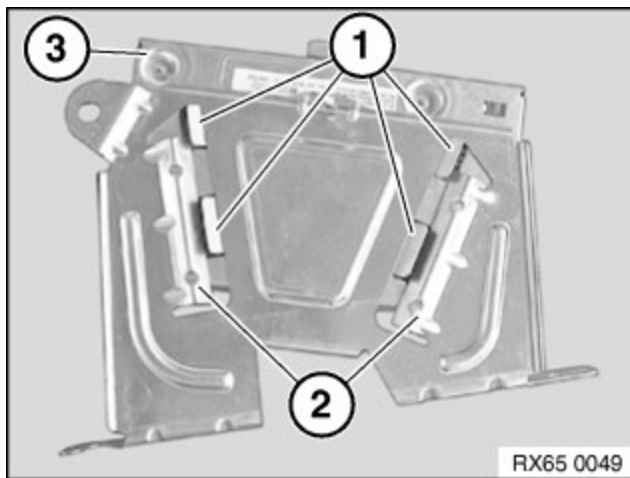


Note:

Lugs (1) must be correctly slid into guide (2).

Check that amplifier (3) is securely seated.


Installation:

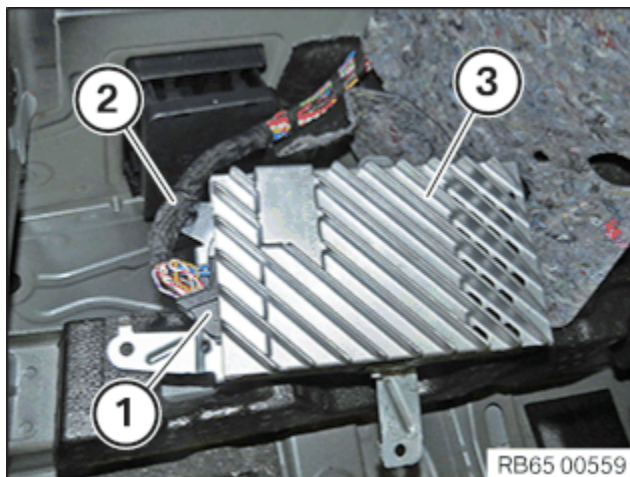

Position amplifier with holder (3).


Connect and lock the connector (1).

Clip in cable clip (2).

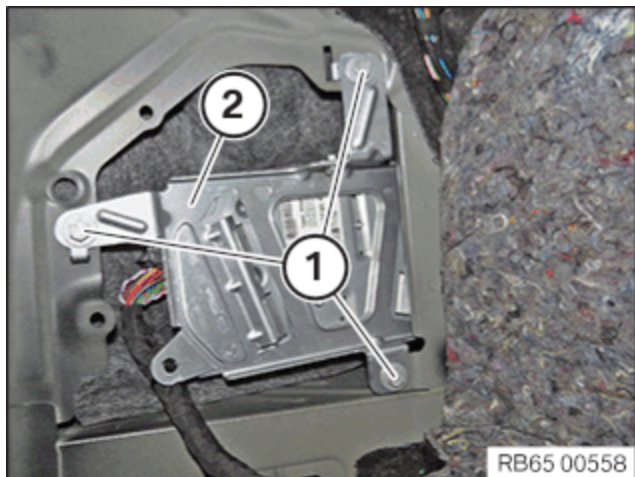

Correctly position amplifier with holder (2).

Tighten down screws (1).

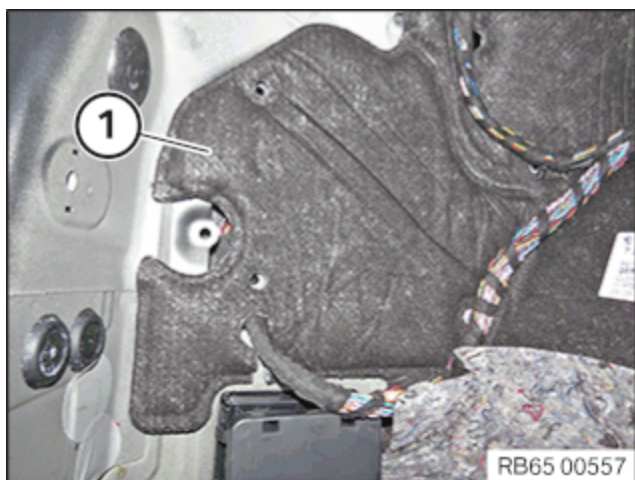

Lay insulating mat (1) correctly.