3421 Overview of tightening torques

Rear brake disc to wheel hub

Real blake disc	to wheel hub		
M8x14	Renew screw.		16 Nm
Brake disc to rea	ar wheel hub		
M8	Renew screw.		16 Nm
Brake disc to rea	ar wheel hub		
M8	Renew screw.		16 Nm
Rear brake disc	to wheel hub		
Torx screw M10x	Renew screw. (Contact surfaces be disc and wheel hub cleaned and fre	27 Nm	
Brake caliper to	wheel carrier		
M10	Replace self-locking or microencape	65 Nm	
Brake disc to rea	ar wheel hub		
M8	Renew screw.		16 Nm
Brake disc to rea	ar wheel hub		
M8	Renew screw.		16 Nm
Brake guard plat	e to wheel carrier		
M6	Renew screws.	Tightening torque	8 Nm
Brake disc to wh	neel bearing		
M8	Renew screw.	Tightening torque	16 Nm
Caliper carrier to	rear wheel carrier		
M12	Renew screws.	Tightening torque	110 Nm
Caliper carrier to	front wheel carrier		
M12	Renew screws.	Tightening torque	80 Nm
Brake caliper to	brake caliper mounting bracket		
M8	Renew screws.	Tightening torque	35 Nm

M8x22	Renew screw.	Tightening torque	35 Nm
Brake disc to rea	ır wheel hub		
M8	Renew screw.		16 Nm
Brake protection	plate on the rear wheel carrier		
M6x12	Renew screw.		8 Nm
Brake caliper to	wheel carrier, rear		
M12X1.5X43	Renew screw.	Tightening torque	80 Nm
		Angle of rotation	55 °
Brake disc to rea	ır wheel hub		
M8	Renew screw.	Tightening torque	16 Nm
Brake protection	plate on the rear wheel carrier		
<u> </u>	Renew screw.	Tightening torque	12 Nm
Brake caliner to	wheel carrier, rear		
Brake camper to	Renew screw.	Tightening torque	110 Nm
Outida half (lavale			
M8	e caliper on caliper carrier)	Tightening torque	30 Nm
		rightening torque	30 1411
Brake disc to rea		Tightoning torque	16 Nm
IVIO	Renew screw.	Tightening torque	IO INII
Brake disc to rea	r wheel hub		
M8	Renew screw.	Tightening torque	16 Nm
Brake caliper to	wheel carrier, rear		
	Renew screw.	Tightening torque	40 Nm
		Angle of rotation	60 °
Jointed rod to w	ishbone		
ScrewsM6			
		Tightening torque	8 Nm

Rear brake guard plate

_	•		
ScrewsM6X1	2		
		Tightening torque	12 Nm
Caliper carrier	to rear wheel carrier		
	Renew screw.	Tightening torque	30 Nm
		Angle of rotation	90 °
Guide bolt (br	ake caliper on caliper carrier)		
M8		Tightening torque	35 Nm
Brake caliper	to wheel carrier, rear		
	Renew screw.	Tightening torque	110 Nm
Brake protecti	on plate on the rear wheel carrier		
M6x12	Renew screw.	Tightening torque	8 Nm
Cuido bolt /bw	oko polinov on polinov povvicy)		
	ake caliper on caliper carrier)		25 N
M8			35 Nm
Guide screw (brake caliper to caliper carrier)		
M8	Replace guide screw.	Tightening torque	30 Nm
Caliper carrier	to rear wheel carrier		
M12	Renew screw.	Jointing torque	30 Nm
		Angle of rotation	90 °
Caliper carrier	to rear wheel carrier		
M12	Renew screw.	Tightening torque	30 Nm
		Angle of rotation	90 °
Guide screw (brake caliper to caliper carrier)		
M8	Replace guide screw.	Tightening torque	30 Nm
Brake disc to	rear wheel hub		
M8	Renew screw.	Tightening torque	16 Nm
Duales die et	waa wada ad baab		
-	rear wheel hub	Ti di ki intin in ki	40.11
M8		Tightening torque	16 Nm

M8x22 Renew screw. Tightening torque 35 Nm