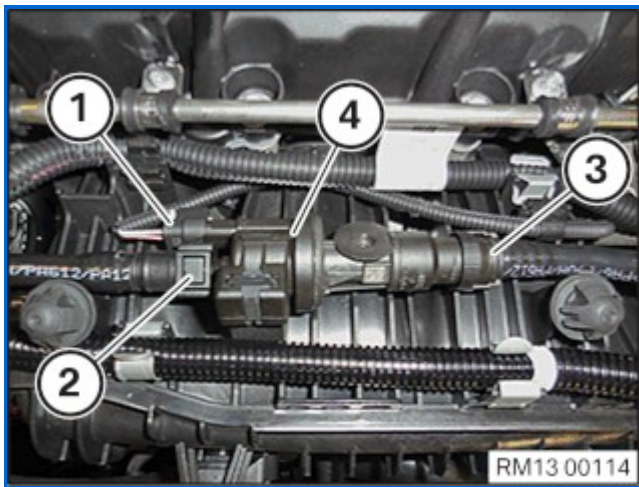


**Necessary preliminary work:**

- Remove [acoustic cover](#)


**Removal:**

Unlock connector (1) and remove.

Unlock tank ventilation line (2) and disconnect.

Unlock tank ventilation line (3) on throttle body and disconnect.

Detach tank vent valve (4) from holder and remove.

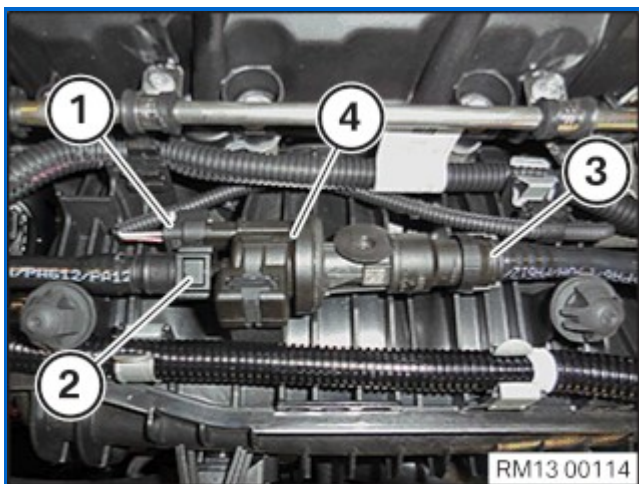**Installation:**

Attach connector (1).

Connector (1) must engage audibly.

Plug in tank ventilation line (2).

Tank ventilation line (2) must snap audibly into place.

Connect tank ventilation line (3).

Tank ventilation line (3) must snap audibly into place.

Fasten tank venting valve (4) to the holder.

**Required follow-up work:**

- Install [acoustic cover](#)

