


[BMW F48 X1 xDrive18d SAV / Repair Manuals and Technical Data / 51 Body equipment / 51 47 Floor/luggage compartment/engine compartment, trim panel /](#)

## 51 47 101 Removing and installing/replacing luggage compartment floor trim panel



### Removal:

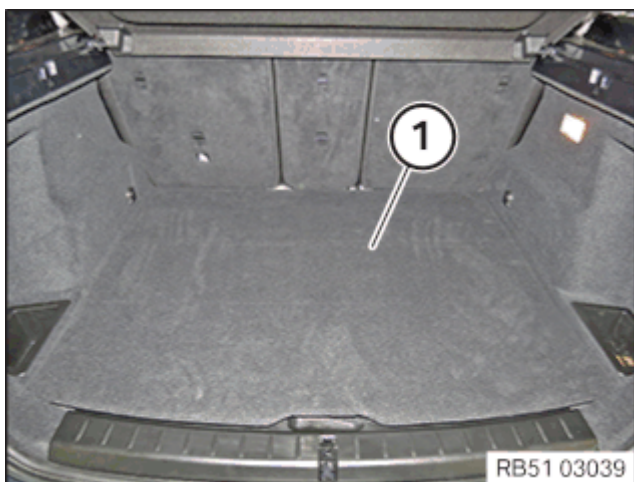


Lift luggage compartment floor trim panel (1) at rear so that it can be detached from the guides at the front.

Remove luggage compartment floor trim panel (1) from the vehicle.



### Installation:

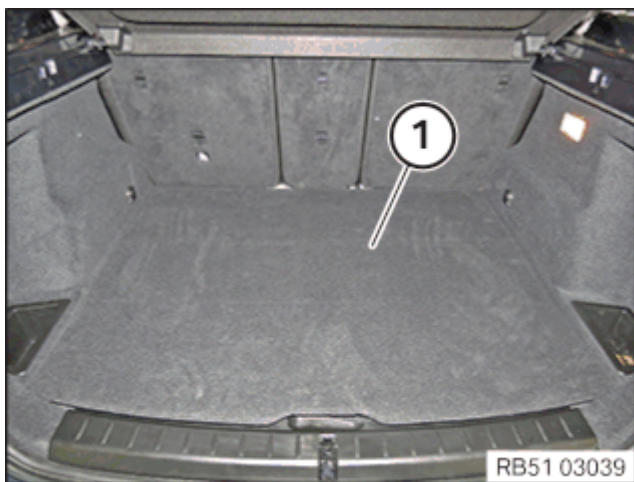

Attach luggage compartment floor trim panel (1) at front in guides and lay down at rear.

This site uses cookies to personalize your experience, analyze site usage and offer tailored promotions. [Learn more about how we use cookies](#)

OK