

[BMW F48 X1 xDrive18d SAV / Repair Manuals and Technical Data / 51 Body equipment / 51 12 Rear bumper /](#)

51 71 478 Removing and installing/replacing the rear left or right wheel arch trim




Special tools required:

- [00 2 230](#)

Note: For clarity the vehicle is only partially pictured.



Removal:

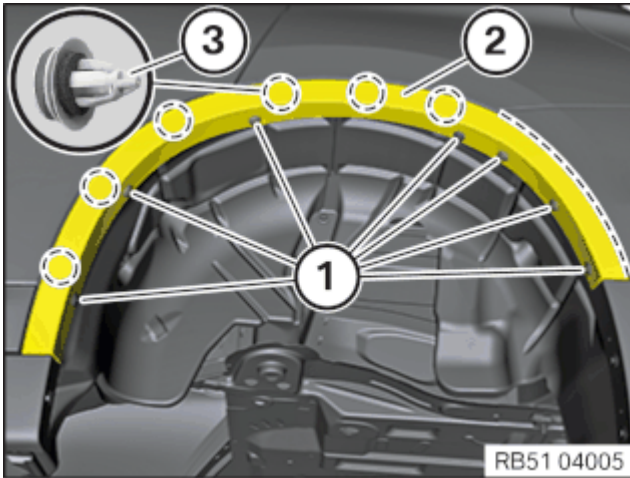


Remove the blind rivet (1).

Disengage the trim (2) from the clips (3) around the side panel.

Loosen and remove the trim (1) from the latch mechanisms on the bumper.



Installation:

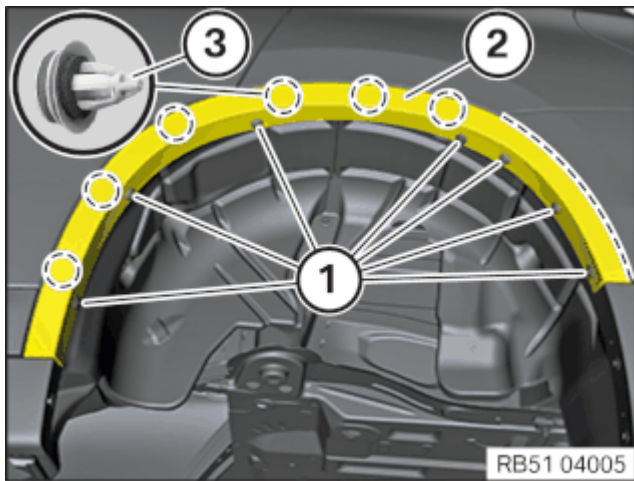

Note:
Renew faulty clips (3).

Insert the trim (2) and engage with the clips (3).

Engage the trim (2) with the latch mechanisms on the bumper.

Install the blind rivet (1) using special tool [00 2 230](#) .

For informational purposes only. The information on this website is provided AS-IS with no warranties, express or implied, and is not guaranteed to be error-free, up-to-date or complete. NewTIS and BMW assume no liability for any loss or damage arising from the use or reliance on the information and content on this website. The content on this website is subject to change without notice.